

# Denon Professional DN-300Z

## Firmware Update Instructions

### IMPORTANT:

If your serial number is LOWER than (21)\*\*\*\*\*09240, update using firmware **0.71**

If your serial number is GREATER than (21)\*\*\*\*\*09240:

- First update using firmware **v172**
- Then update using firmware **r100**

1. Extract the appropriate firmware for your unit. Add the extracted .BIN file to the root directory of an empty flash drive.
2. With the DN-300Z powered off, connect the USB flash drive to the DN-300Z.
3. Power on the DN-300Z. After a few seconds, it will show "Update Mode" and will flash the currently installed firmware version.
4. When the DN-300Z says "**Version Up >OK<**", press the **PUSH TO ENTER** button.
5. Press **PLAY** when the DN-300Z asks to begin the update.
6. The DN-300Z will prompt a power-cycle once the firmware update is complete.